 
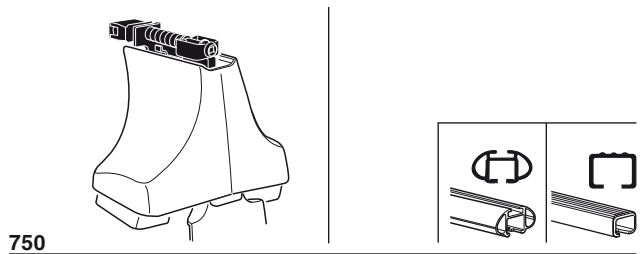 
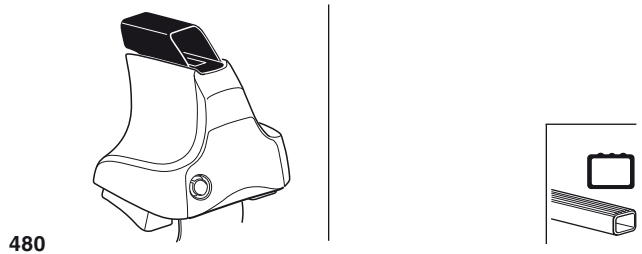 


Kit 1547

TOYOTA IQ, 3-dr Hatchback, 09-

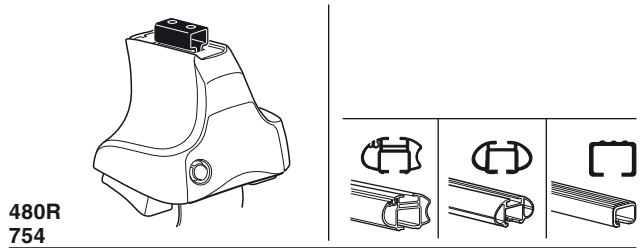

Max. 50kg
Max. 110 lbs

x1

x4

x4

x4

480R/754

x1

x4

x4

x4

480

x1

x4

x4

750

| | | | | |
|----------------------|----|----------------------|----------|----|
| x2 x2 x2 x4 | x2 | x2 x2 x4 x4 | x2 x2 | x2 |
|----------------------|----|----------------------|----------|----|

1049 x1

1050 x1

468 x2

329 x1

 
330 x1

19 x2


x1

Kit






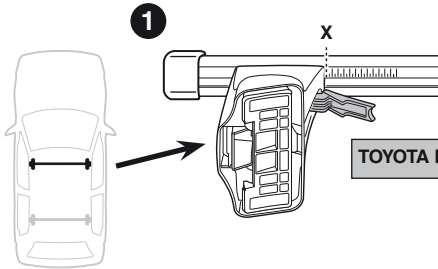



| | |
|---------------------------------------|-----------|
| TOYOTA IQ, 3-dr Hatchback, 09- | X |
| | 41 |

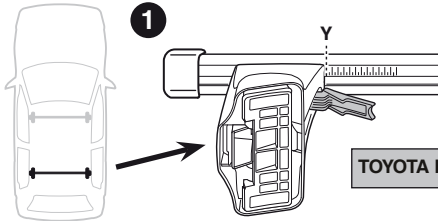 

| | |
|---------------------------------------|-------------|
| TOYOTA IQ, 3-dr Hatchback, 09- | Y |
| | 32,5 |

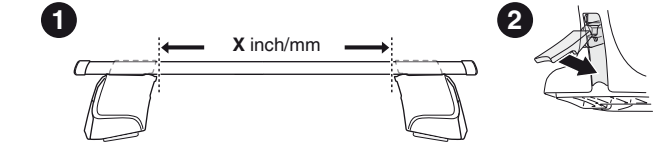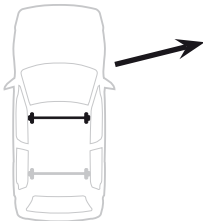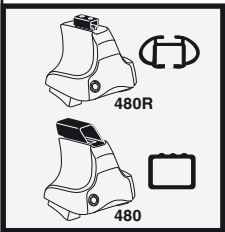   

| | | |
|---------------------------------------|----------------|----------------|
| TOYOTA IQ, 3-dr Hatchback, 09- | X inch | X mm |
| | 41 3/4" | 1061 mm |

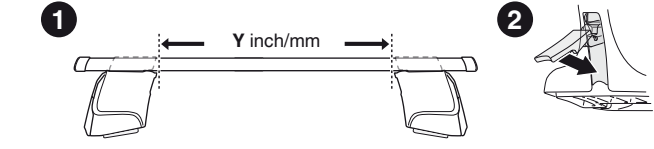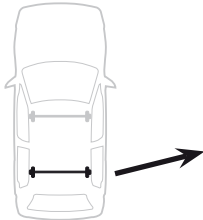  

| | | |
|---------------------------------------|----------------|---------------|
| TOYOTA IQ, 3-dr Hatchback, 09- | Y inch | Y mm |
| | 38 3/8" | 976 mm |

4

TOYOTA IQ, 3-dr Hatchback, 09-

329



1049



FL



330



1050



FR



19



468



RL



19



468



 
 
 
 
 
 
 
RR






480R/754



480

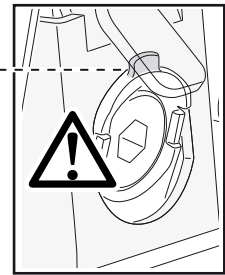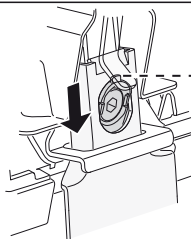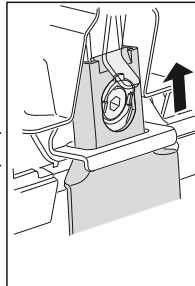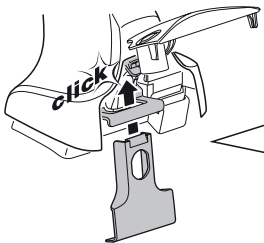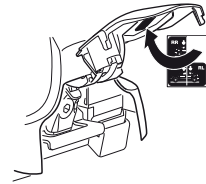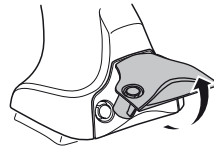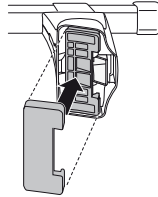




750

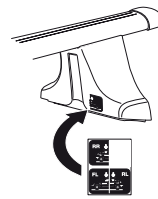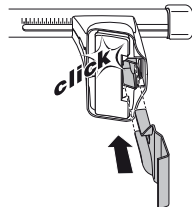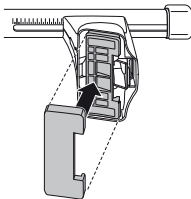   

5



| | | | | |
|--------------------------------|-------|--------|-----------------|--------------------|
| TOYOTA IQ, 3-dr Hatchback, 09– | X mm | Y mm | X inch | Y inch |
| | 20 mm | 600 mm | $\frac{3}{4}$ " | 23 $\frac{5}{8}$ " |

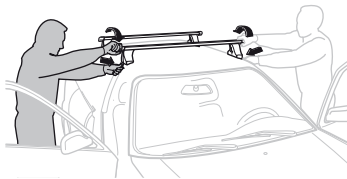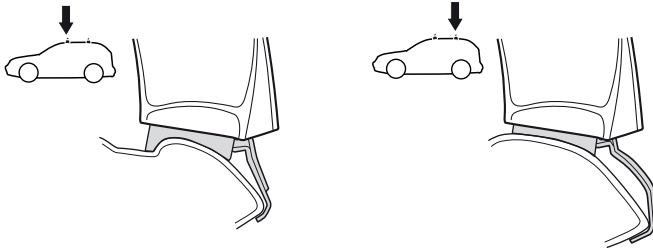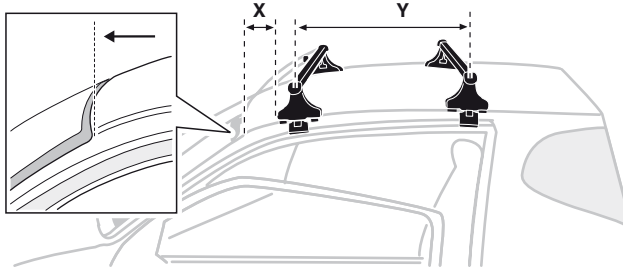   

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apertar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pielieciet pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťta bagażníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันโนแบบสลับ

 
 
6




480R/754




480

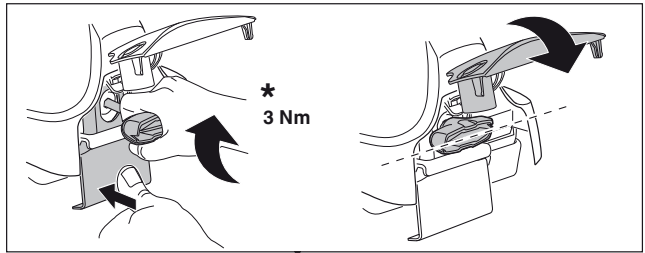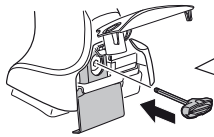



*
3 Nm

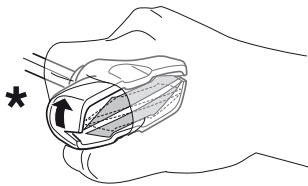


*

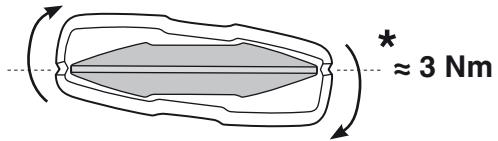 



*
≈ 3 Nm

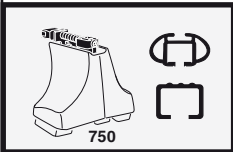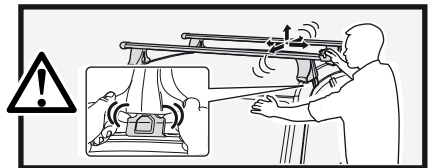  


750

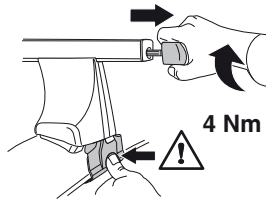 


4 Nm

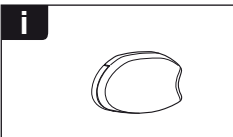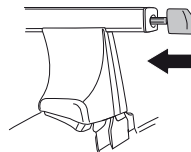  


i

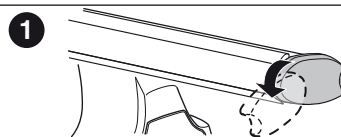 


1

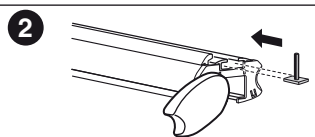 


2

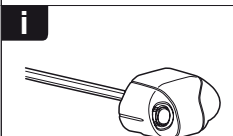 


i

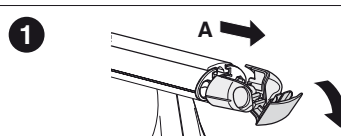 


1

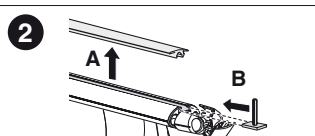 


2

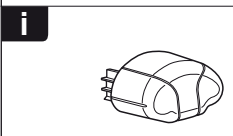 

i

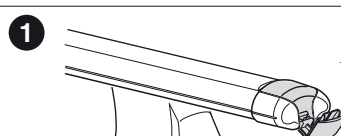 


1

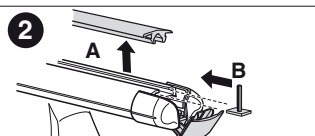 

2



 THULE
SWEDEN
**ONE
KEY
SYSTEM**

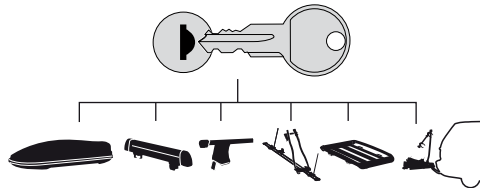

- 544 (x4)
- 596 (x6)
- 588 (x8)
- NA 510 (x10)
- EUR 452 (x12)
- ASIA



WW ▶ Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
NA ▶ Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

info@thule.com
customer.service@thule.com

www.thule.com