 
 
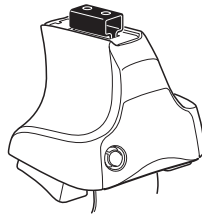 


Kit 1714

 
ISUZU D-Max, 4-dr Space Cab, 12-
ISUZU D-Max, 4-dr Extended Cab, 12-

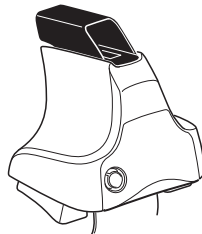

754 Rapid System
480R Rapid Traverse (North America)

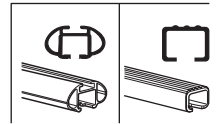


480 Traverse (North America)



754 Rapid System
480R Rapid Traverse (North America)

480 Traverse (North America)


 
1

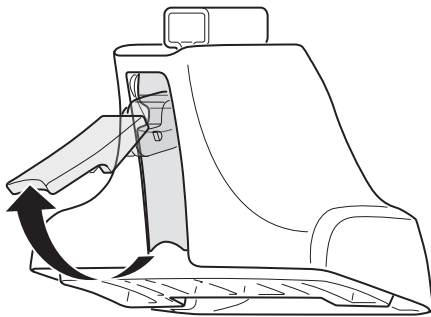



2



 
 
754 Rapid System
480R Rapid Traverse
(North America)

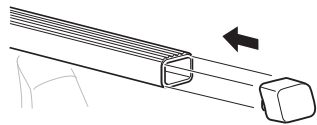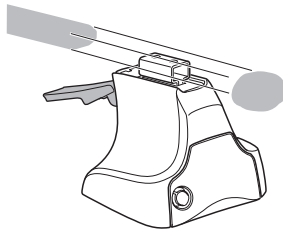

x4

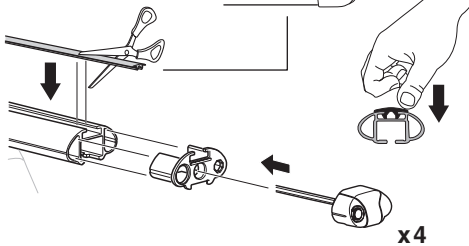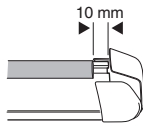  



x4

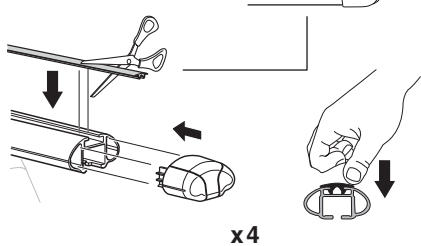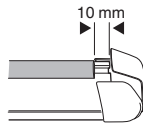  

x4




  480 Traverse
(North America)

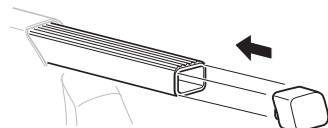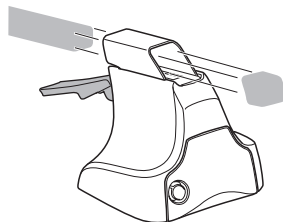


x4

 
3



754 Rapid System

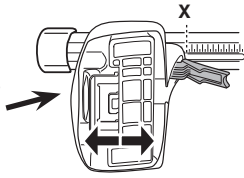 

| | X |
|--|-----------|
| ISUZU D-Max, 4-dr Space Cab, 12- | 38 |
| ISUZU D-Max, 4-dr Extended Cab, 12- | 38 |

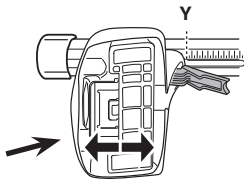 

| | Y |
|--|-----------|
| ISUZU D-Max, 4-dr Space Cab, 12- | 36 |
| ISUZU D-Max, 4-dr Extended Cab, 12- | 36 |

3



 
480R Rapid Traverse




480 Traverse



(North America)

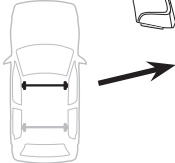


| | X inch | X mm |
|--|---------------------------------------|----------------|
| ISUZU D-Max, 4-dr Space Cab, 12- | 40 ⁵/₈ " | 1031 mm |
| ISUZU D-Max, 4-dr Extended Cab, 12- | 40 ⁵/₈ " | 1031 mm |

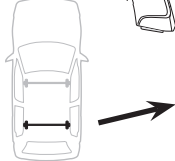 



| | Y inch | Y mm |
|--|---------------------------------------|----------------|
| ISUZU D-Max, 4-dr Space Cab, 12- | 39 ³/₄ " | 1011 mm |
| ISUZU D-Max, 4-dr Extended Cab, 12- | 39 ³/₄ " | 1011 mm |

 4


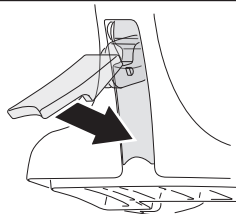


5

 
 
ISUZU D-Max, 4-dr Space Cab, 12-
ISUZU D-Max, 4-dr Extended Cab, 12-

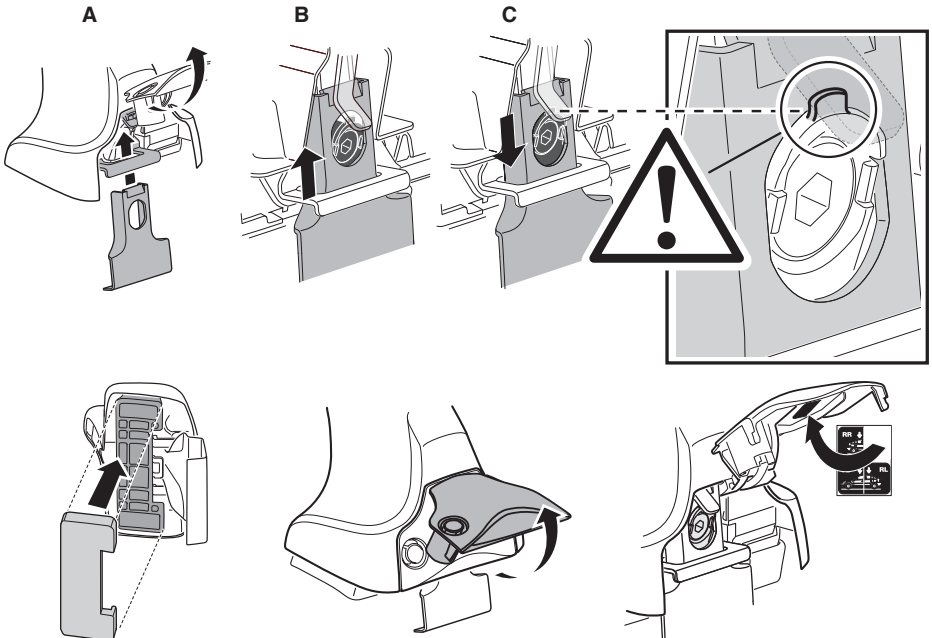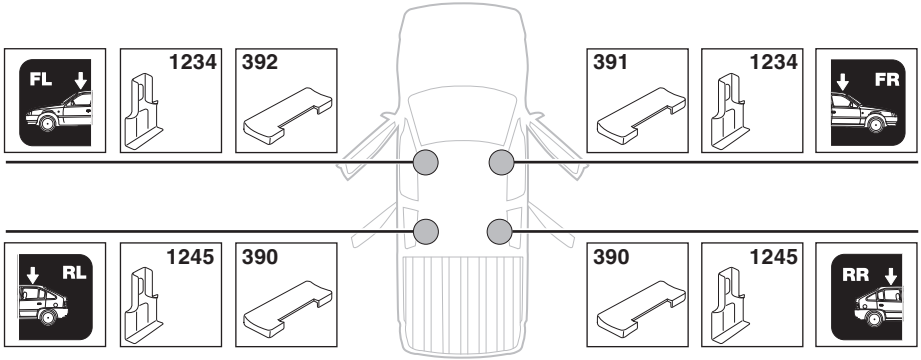


6

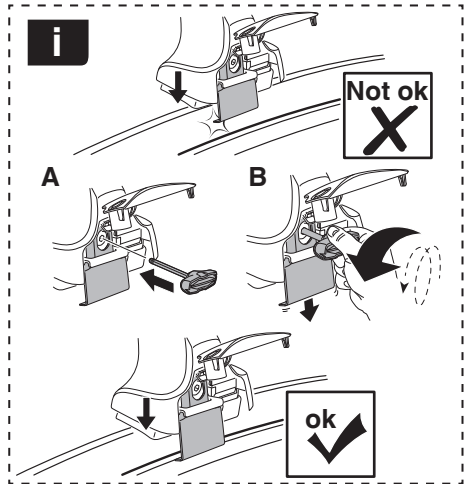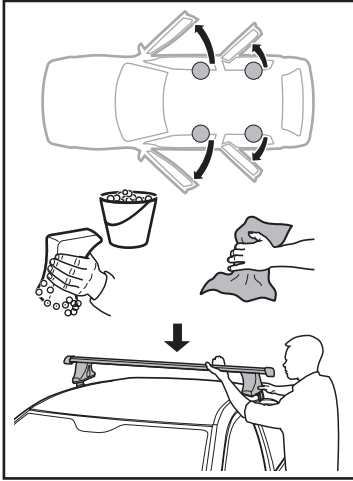  

| | X mm | Y mm | X inch | Y inch |
|-------------------------------------|--------|--------|---------------------------------|----------------------------------|
| ISUZU D-Max, 4-dr Space Cab, 12- | 250 mm | 670 mm | 9 ⁷ / ₈ " | 26 ³ / ₈ " |
| ISUZU D-Max, 4-dr Extended Cab, 12- | 250 mm | 670 mm | 9 ⁷ / ₈ " | 26 ³ / ₈ " |

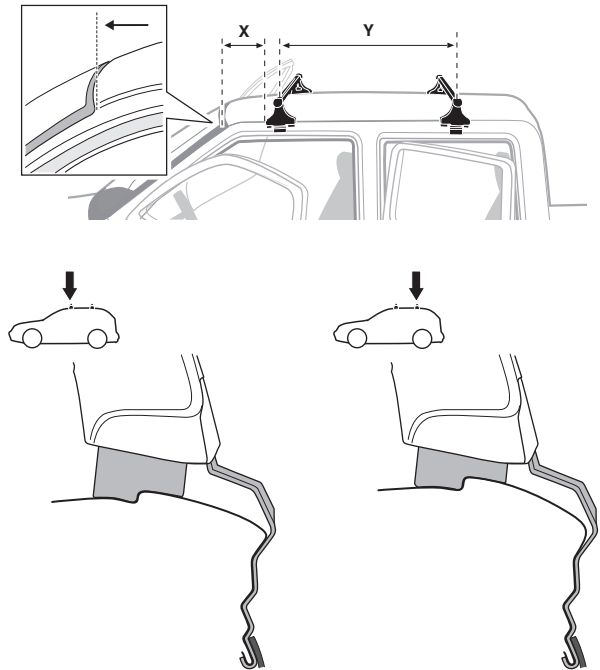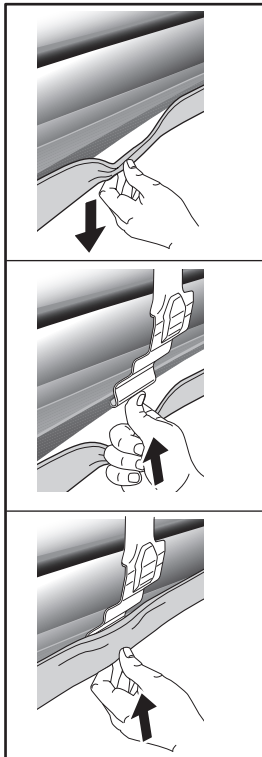  

7

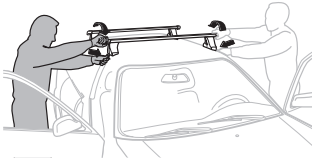 

GB/US Tighten alternately
 D Die Schrauben abwechselnd anziehen
 F Serrer alternativement chaque côté
 NL Afwisselend aan de linker- en de rechterkant aandraaien
 I Alternare il serraggio delle viti
 E Apretar alternativamente
 PT Aperte alternadamente
 S Dra åt växelvis
 FIN Kierrä vuorotellen
 EST Pinguldage vaheldumisi
 LAT Pieļieciet pamišus
 LIT Užsukinėkite pakaitomis
 PL Śruby dokręcaj naprzemiennie
 RU Затягивайте попеременно

 
CZ Pokręťta bagażnika dokręcaj dokręcaj naprzemiennie.
 SK Dofahajte striedavo
 SLO Privijajte izmenično.
 HR Naizmjenočno zategnite
 HU Egymástól függetlenül szorítandó
 GR Σφιγγείτε εναλλάξ
 TR Dönüşümlü sıkın

中文 交替拧紧


한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันในแบบสลับ

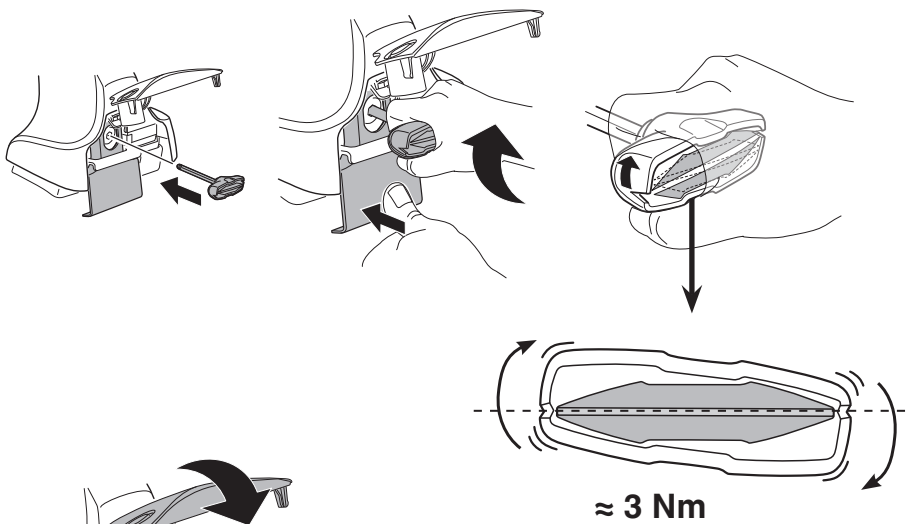



≈ 3 Nm


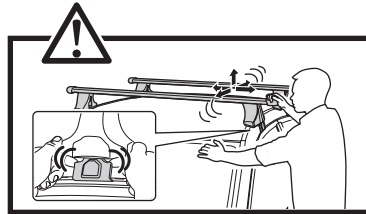 


8




    x1
17 mm

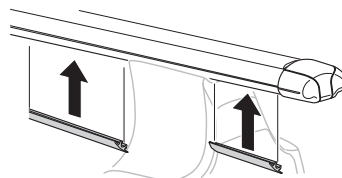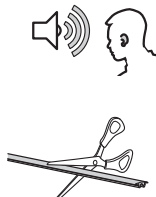

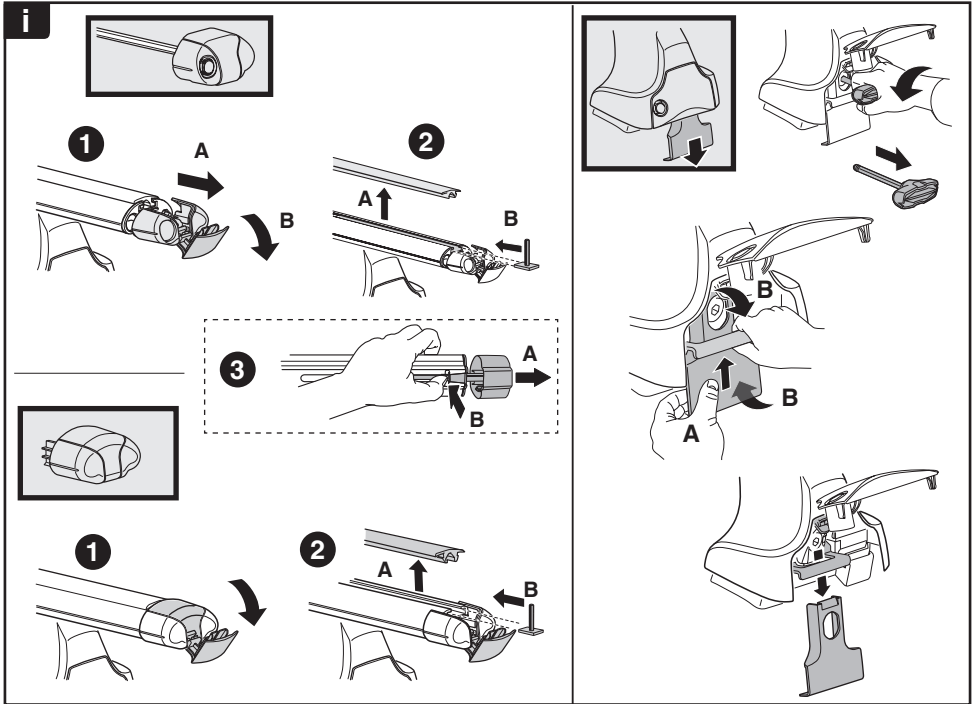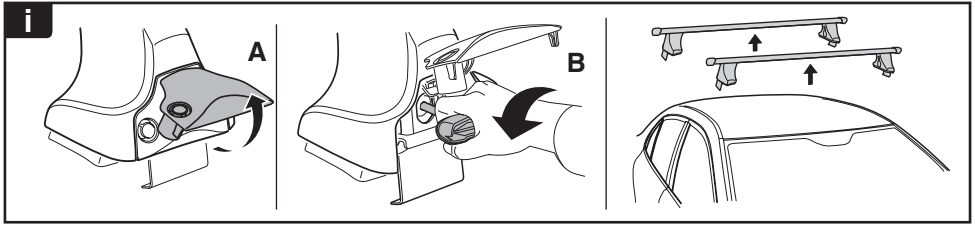

THULE
SWEDEN
**ONE
KEY
SYSTEM**

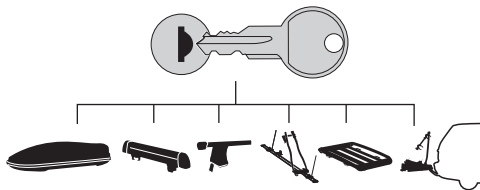 

544 (x4)

 
596 (x6)

588 (x8)

NA **510** (x10)

EUR **452** (x12)

ASIA

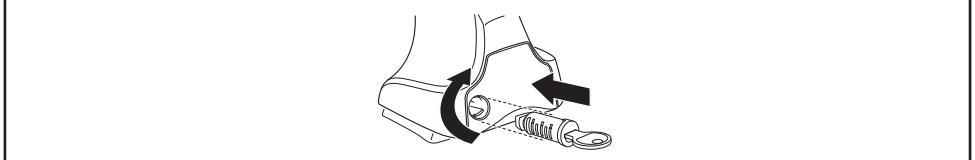

WW ▶ Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
NA ▶ Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

info@thule.com
customer.service@thule.com

www.thule.com



 
 
www.thule.com

 


info@thule.com
customer.service@thule.com




Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA
Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN

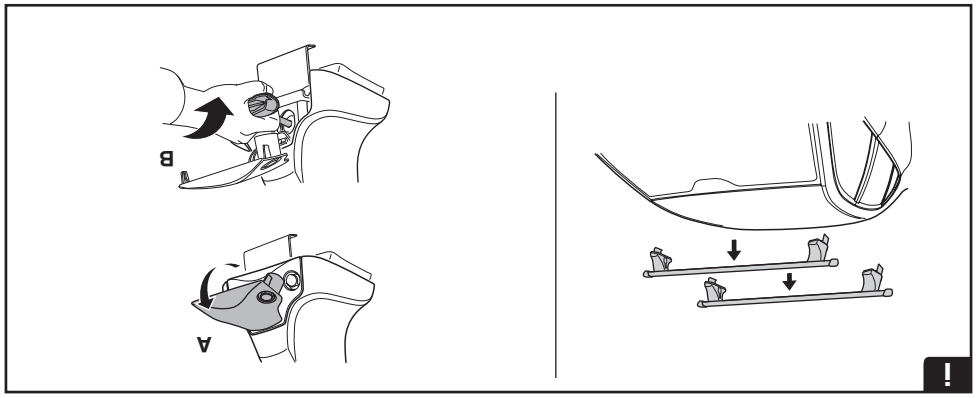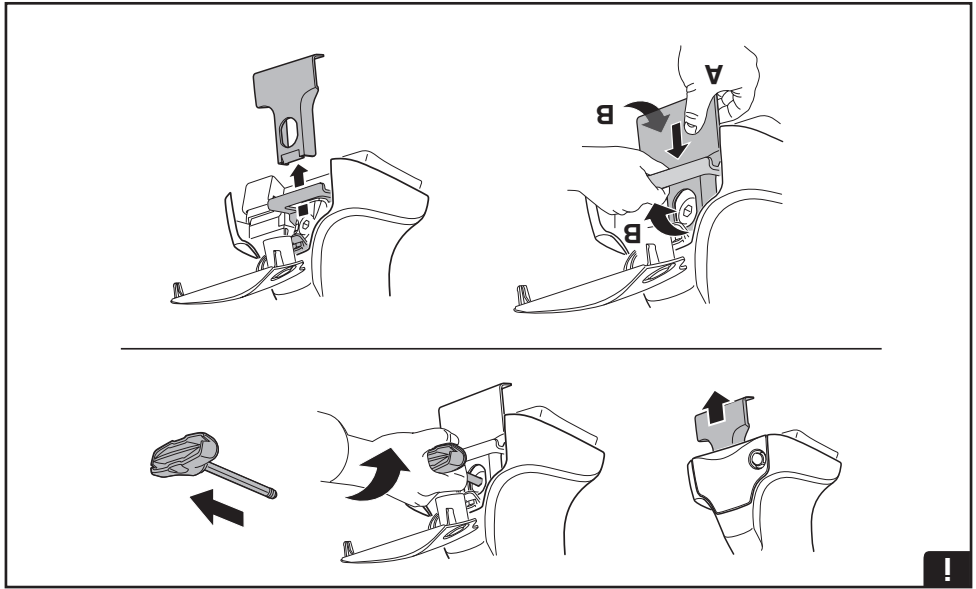

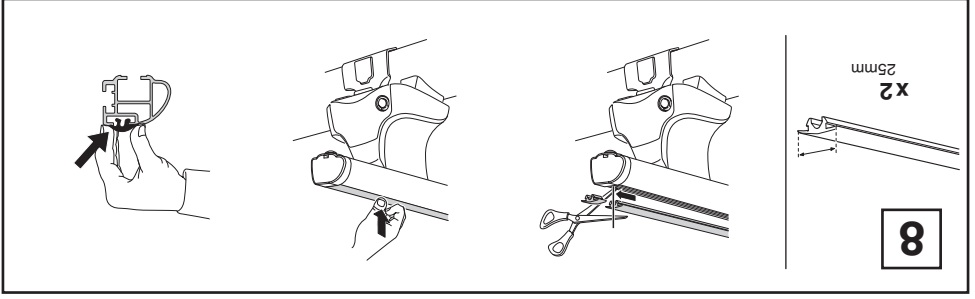


8


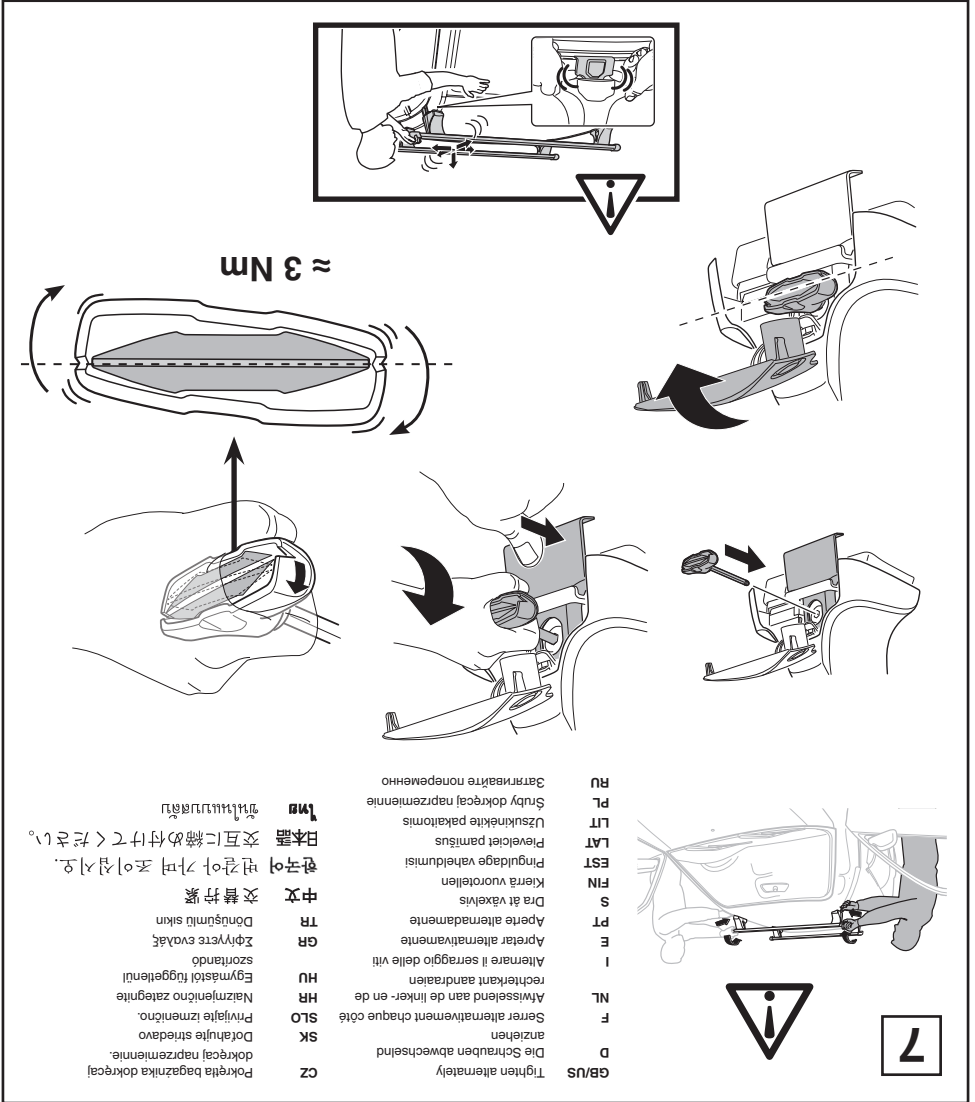 


7



CZ Pokrétla bagazníka dokrecaj dokrecaj naprazmeniemie.
SK Dotiahnuť striedavo.
SLO Privajlajte izmenično.
HR Nazmjenično zategnite.
HU Egymástól függetlenül szorítandó.
GR Ζφίτυστε εναλλάξ.
TR Dönüştürmlü sıkın.
中文 交替拧紧。
한국어 번갈아가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ไขน็อตสลับกัน


 
 
 
GB/US Tighten alternately.
D Die Schrauben abwechselnd anziehen.
F Serrer alternativement chaque côté.
NL Afwisselend aan de linker- en de rechterkant aandraaien.
I Alternare il serraggio delle viti.
E Aperte alternativamente.
PT Aperte alternadamente.
S Dra åt växelvis.
FIN Kierrä vuorotellen.
EST Pinguldage vaheldumisi.
LAT Pveiclot patīstus.
LIT Užsukinėkite pakaitomis.
PL Śruby dokrecaj naprzemiennie.
RU Затягивайте попеременно.

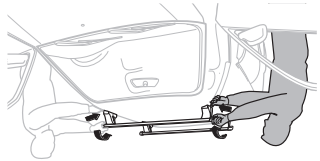

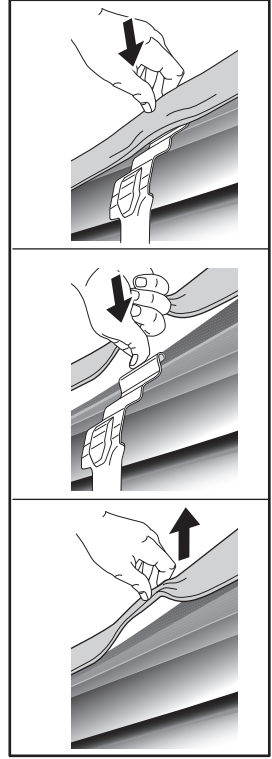
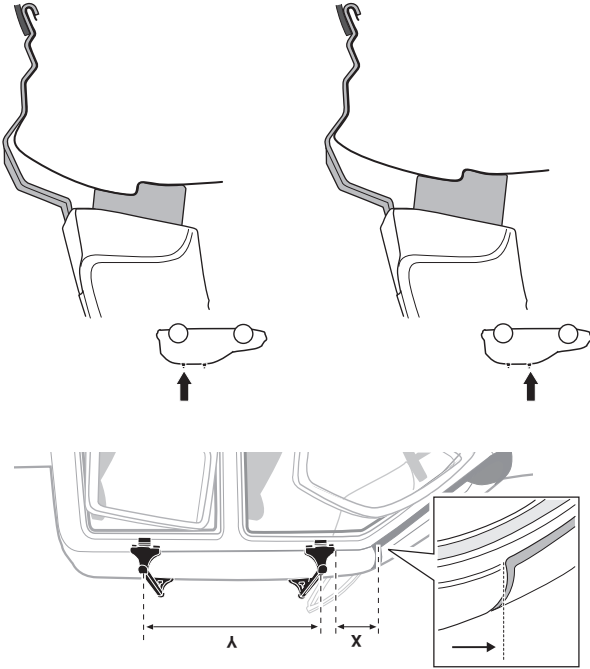





| | | | | |
|-------------------------------------|--------|--------|--------|---------|
| ISUZU D-Max, 4-dr Extended Cab, 12- | 250 mm | 670 mm | 9 7/8" | 26 3/8" |
| ISUZU D-Max, 4-dr Space Cab, 12- | 250 mm | 670 mm | 9 7/8" | 26 3/8" |
| | X mm | Y mm | X inch | Y inch |

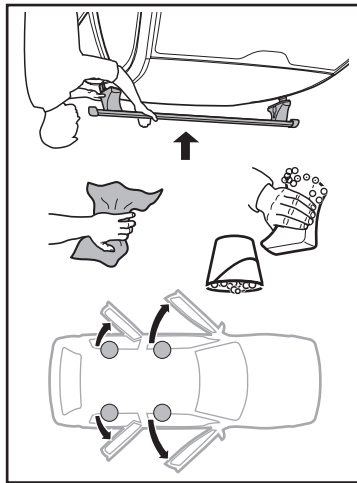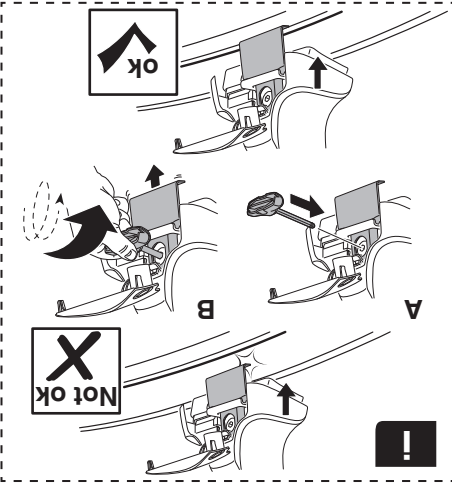  

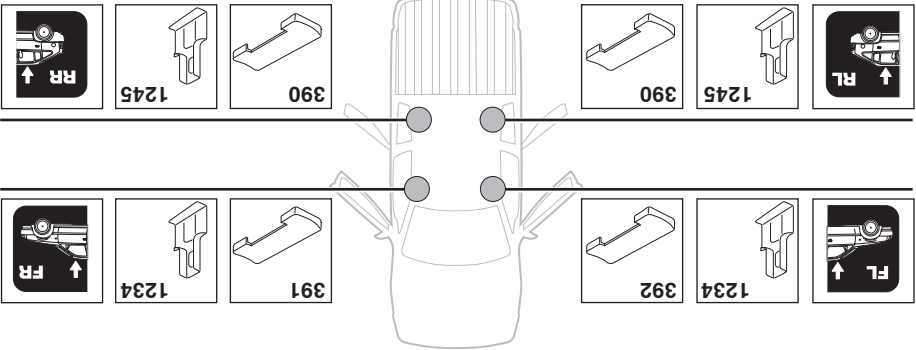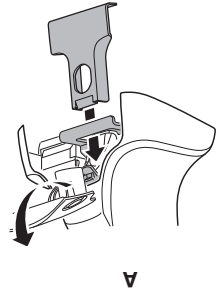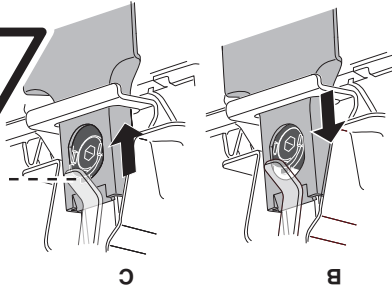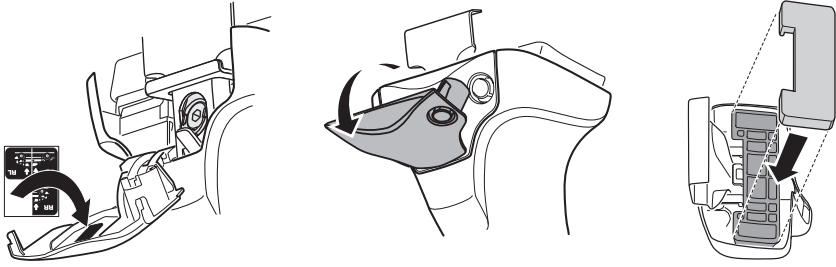    

     
ISUZU D-Max, 4-dr Space Cab, 12-
 ISUZU D-Max, 4-dr Extended Cab, 12-

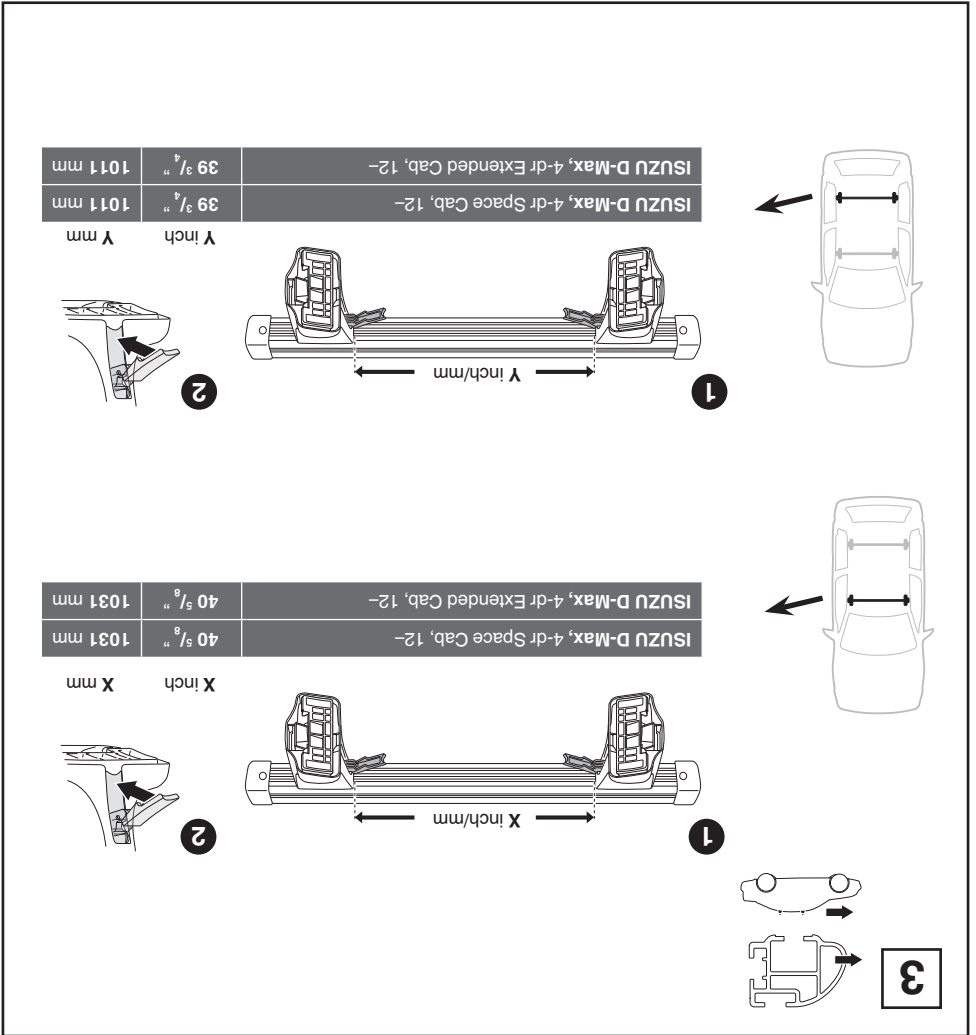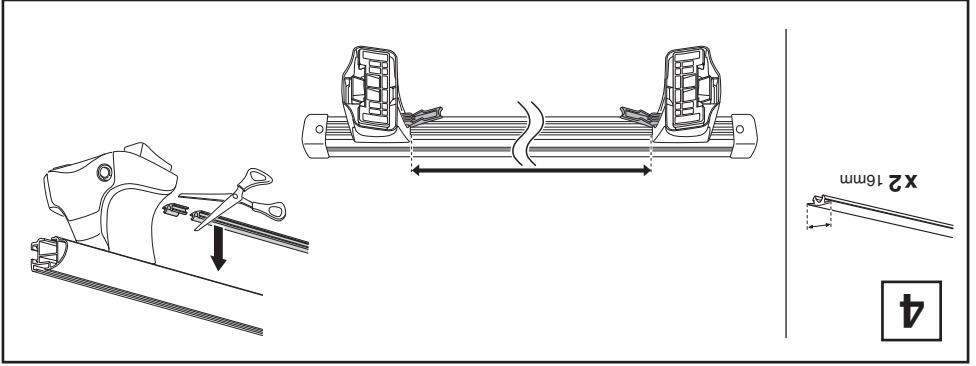




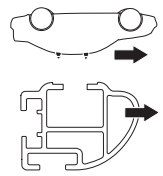
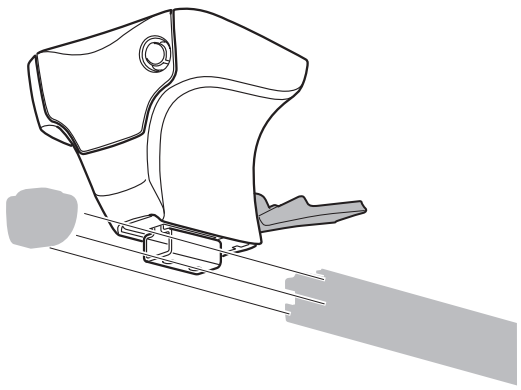
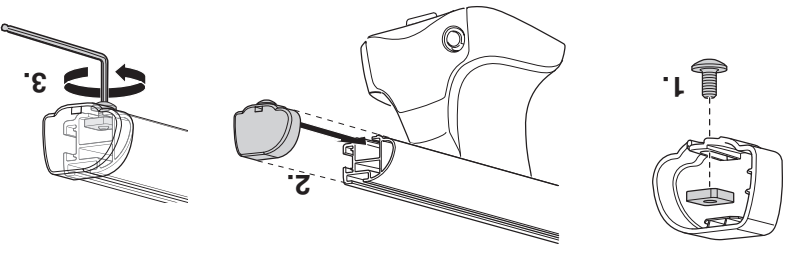


-  x1 5mm
-  x4
-  x4
-  x2
-  x2

 2

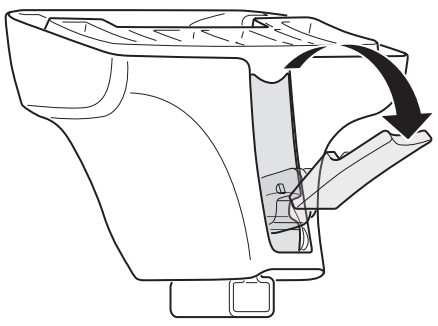

1

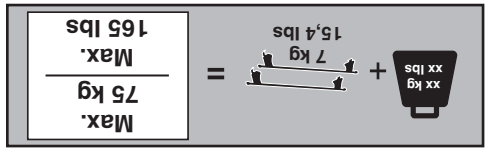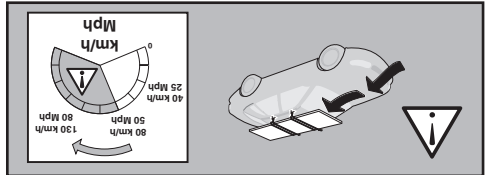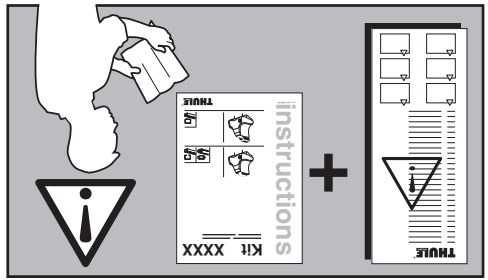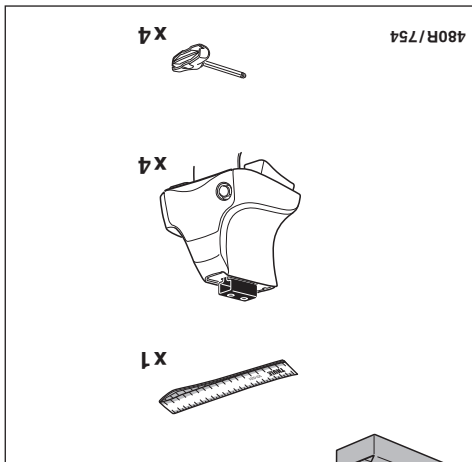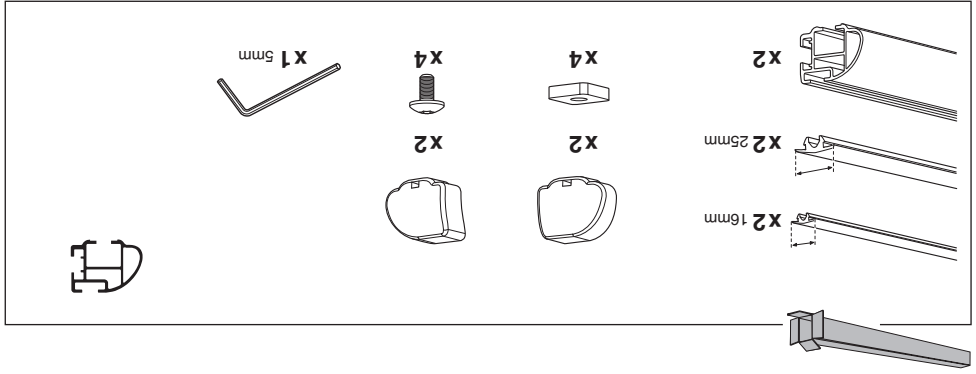     
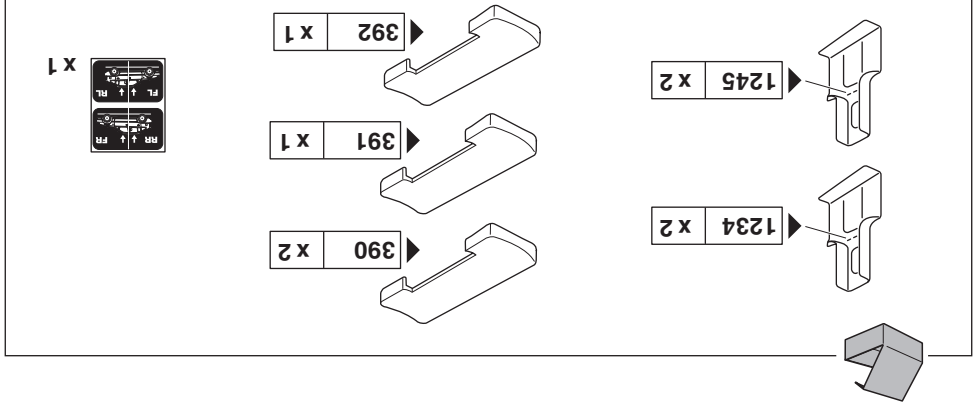 


instructions

Kit 1714

ISUZU D-Max, 4-dr Space Cab, 12-
ISUZU D-Max, 4-dr Extended Cab, 12-

  480R
754

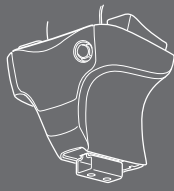

ISO 11154-E

PROFESSIONAL

THULE
SWEDEN®