



Kit 1002

AUDI A6, 4-dr Sedan, 94-97



AUDI A6 Avant, 5-dr Estate, 94-97

AUDI 100, 4-dr Sedan, 91-93

 
 
480R
754

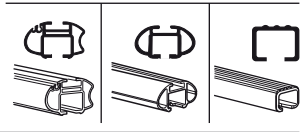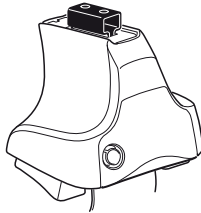

480

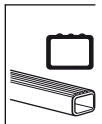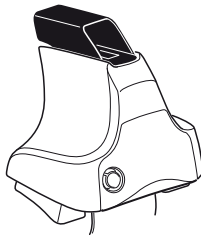 

750

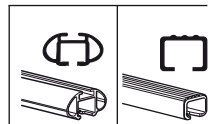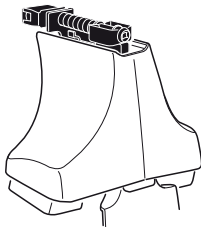 



Kit



3





  754

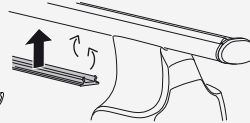


750

  1

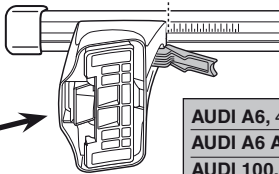


2

 


| | X |
|-----------------------------------|------|
| AUDI A6, 4-dr Sedan, 94-97 | 31,5 |
| AUDI A6 Avant, 5-dr Estate, 94-97 | 31,5 |
| AUDI 100, 4-dr Sedan, 91-93 | 31,5 |

 1

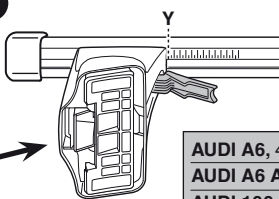

2

 

| | Y |
|-----------------------------------|----|
| AUDI A6, 4-dr Sedan, 94-97 | 31 |
| AUDI A6 Avant, 5-dr Estate, 94-97 | 31 |
| AUDI 100, 4-dr Sedan, 91-93 | 31 |

 


480R




480

1




2

 


| | X inch | X mm |
|-----------------------------------|--------|--------|
| AUDI A6, 4-dr Sedan, 94-97 | 38" | 966 mm |
| AUDI A6 Avant, 5-dr Estate, 94-97 | 38" | 966 mm |
| AUDI 100, 4-dr Sedan, 91-93 | 38" | 966 mm |

 1



2

 














| | Y inch | Y mm |
|-----------------------------------|----------------------------------|--------|
| AUDI A6, 4-dr Sedan, 94-97 | 37 ⁷ / ₈ " | 961 mm |
| AUDI A6 Avant, 5-dr Estate, 94-97 | 37 ⁷ / ₈ " | 961 mm |
| AUDI 100, 4-dr Sedan, 91-93 | 37 ⁷ / ₈ " | 961 mm |

4





AUDI A6, 4-dr Sedan, 94-97

AUDI A6 Avant, 5-dr Estate, 94-97

             AUDI 100, 4-dr Sedan, 91-93

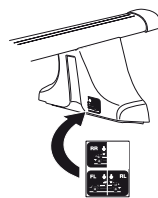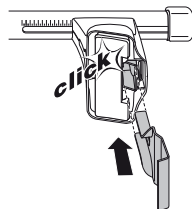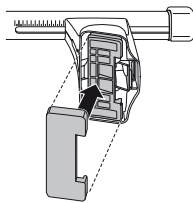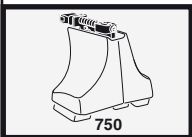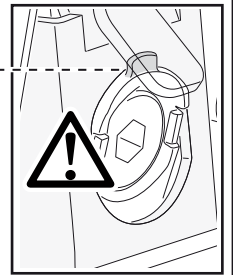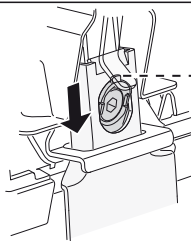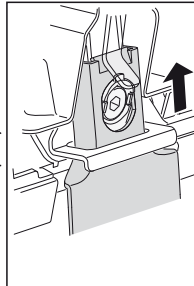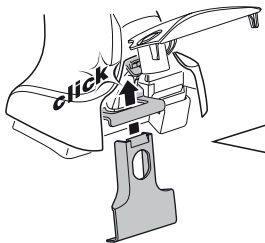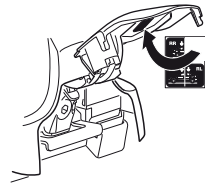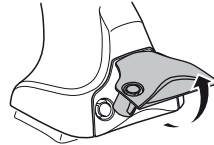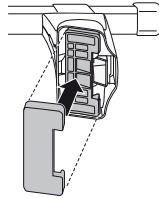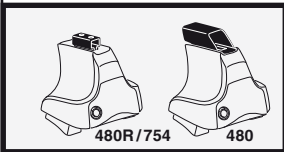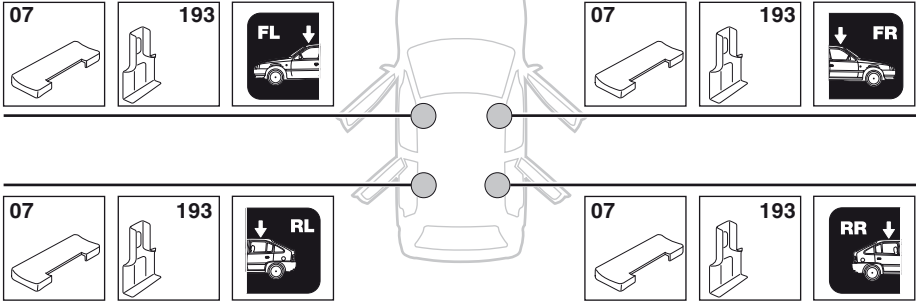

5

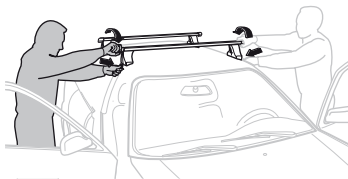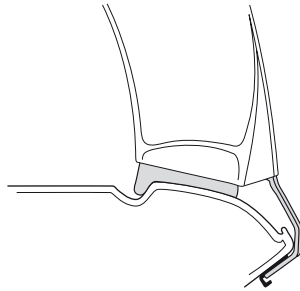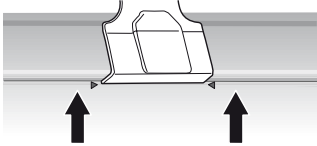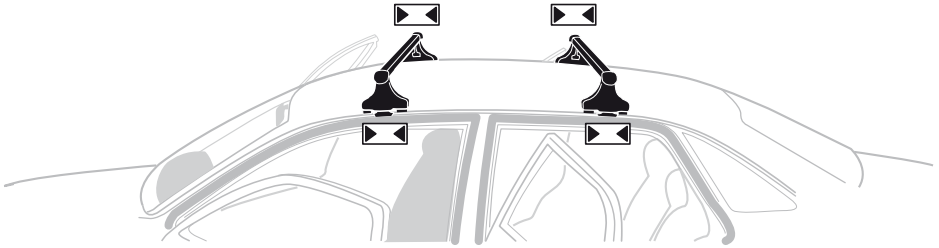    

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apretar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pielieciet pamīšus

LIT Užsukinkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťta багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategniti

HU Egy mástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันในแบบสลับ

 

6



480R/754




480

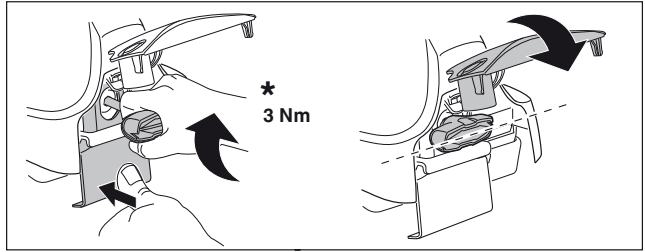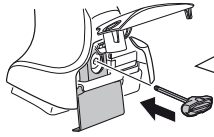



*
3 Nm




*

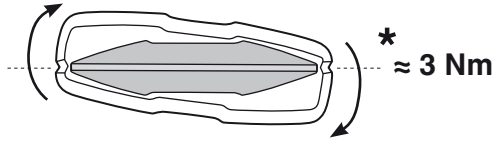




*
≈ 3 Nm

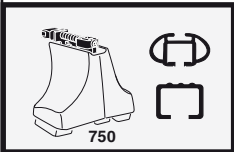
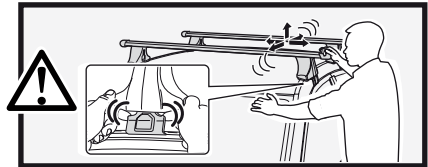


750

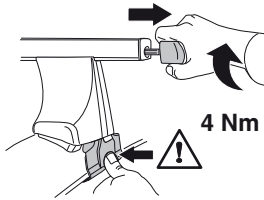 

4 Nm

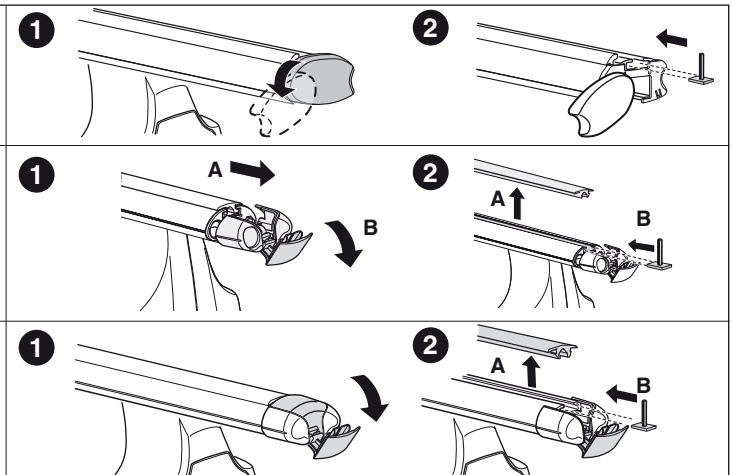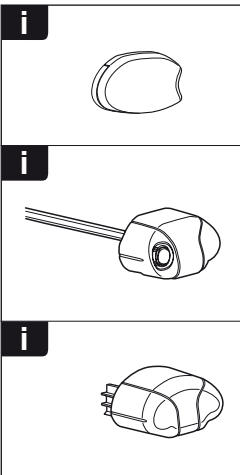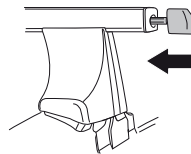  

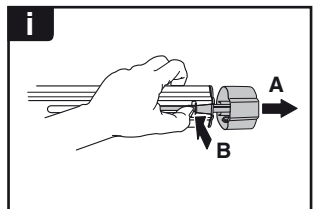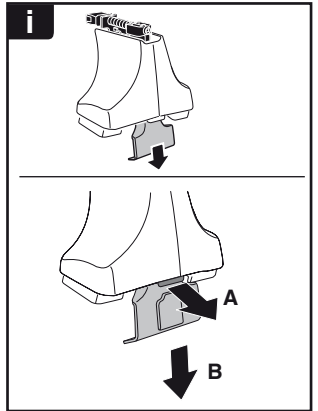 

THULE
SWEDEN
**ONE
KEY
SYSTEM**



- 544 (x4)
- 596 (x6)
- 588 (x8)
- NA 510 (x10)
- EUR 452 (x12)
- ASIA



WW ▶ Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
NA ▶ Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

info@thule.com
customer.service@thule.com

www.thule.com