



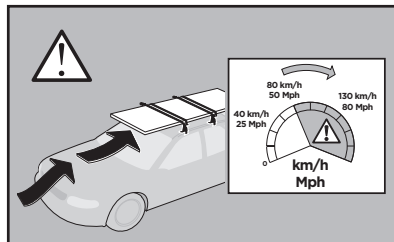

## Thule Rapid System Kit 1741

# > Instructions

HYUNDAI Santa Fe, 5-dr SUV, 13-

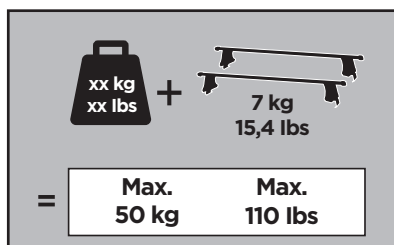


ISO 11154-E

141741  
C.20150818  
519-1741-01


Bring your life  
thule.com




137 x2



366 x1



367 x1



225 x2



1100 x2






x1



x1

1


	X (scale)	X (mm)	X (inch)
HYUNDAI Santa Fe, 5-dr SUV, 13-	47	1121	44 1/8

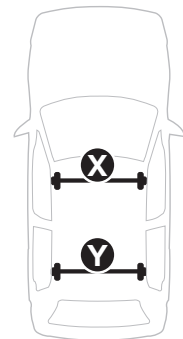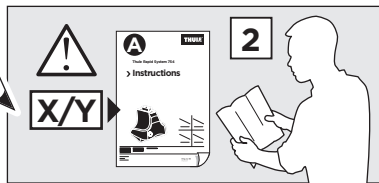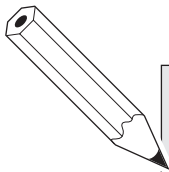


	Y (scale)	Y (mm)	Y (inch)
HYUNDAI Santa Fe, 5-dr SUV, 13-	42,5	1076	42 3/8

**2**

**HYUNDAI Santa Fe, 5-dr SUV, 13-**

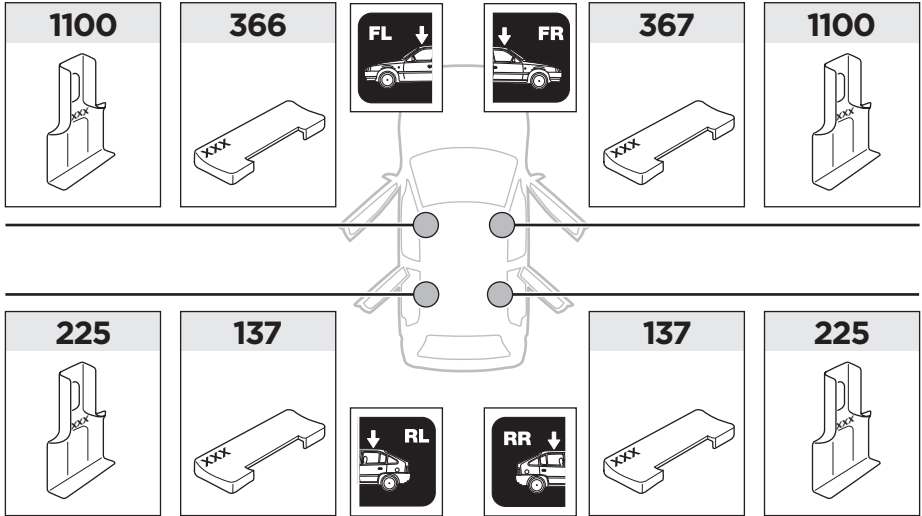

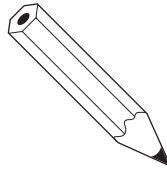**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>HYUNDAI Santa Fe</b> , 5-dr SUV, 13-	<b>270</b>	<b>700</b>	<b>10 <sup>5</sup>/<sub>8</sub></b>	<b>27 <sup>1</sup>/<sub>2</sub></b>

