

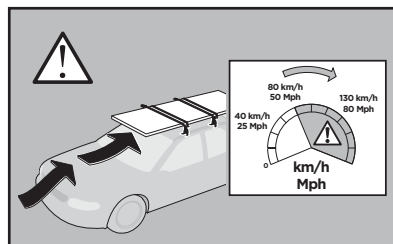
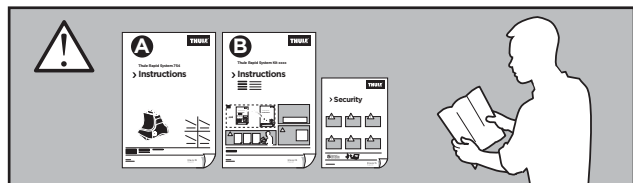


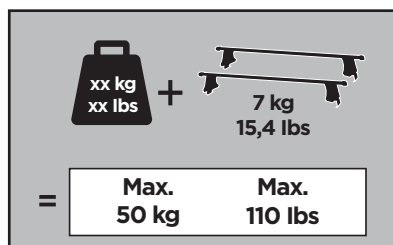

Thule Rapid System Kit 1747

> Instructions

TOYOTA Avanza, 5-dr MPV, 13-

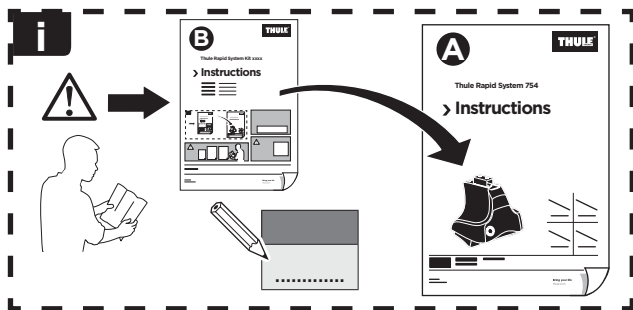

ISO 11154-E


141747

C.20141219
519-1747-01


Bring your life
thule.com




440 x1



441 x1



442 x2



1315 x2



1316 x2





x1



x1

1



	X (scale)	X (mm)	X (inch)
TOYOTA Avanza, 5-dr MPV, 13-	34	991	39

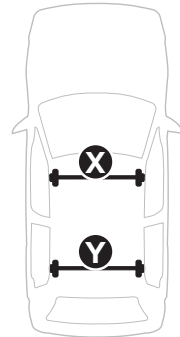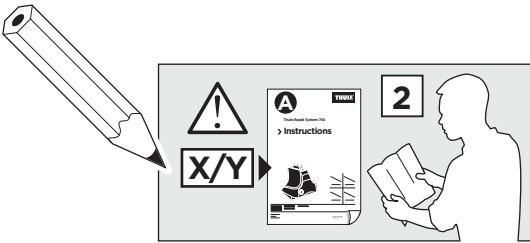


	Y (scale)	Y (mm)	Y (inch)
TOYOTA Avanza, 5-dr MPV, 13-	30	951	37 1/2

2

TOYOTA Avanza, 5-dr MPV, 13-

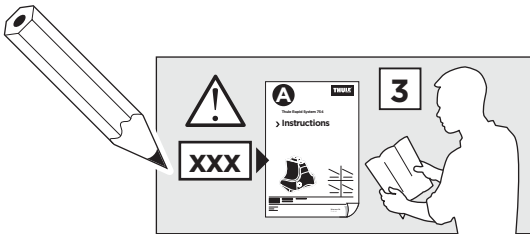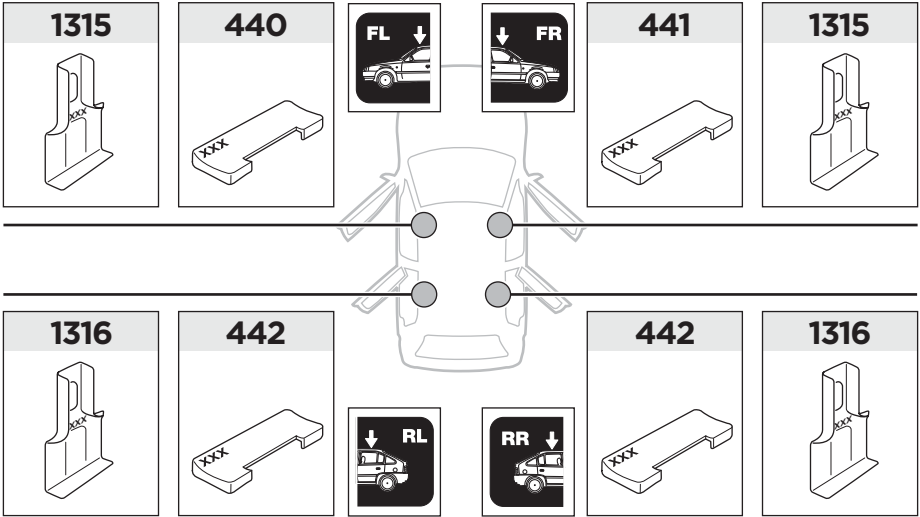

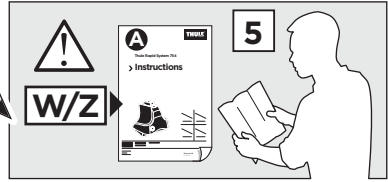3

	W (mm)	Z (mm)	W (inch)	Z (inch)
TOYOTA Avanza, 5-dr MPV, 13-	430	700	16 7/8	27 1/2

