


PARTS INCLUDED Pièces incluses

Before you begin, please read the assembly instructions carefully. Make sure that all parts are included in the package. Assemble step by step.

Avant de commencer, veuillez lire attentivement les instructions de montage. Assurez-vous que toutes les pièces se trouvent dans l'emballage. Effectuez l'assemblage étape par étape.

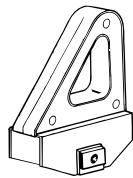

x4
753-0701



x4
753-0776-02


1



x4




x4

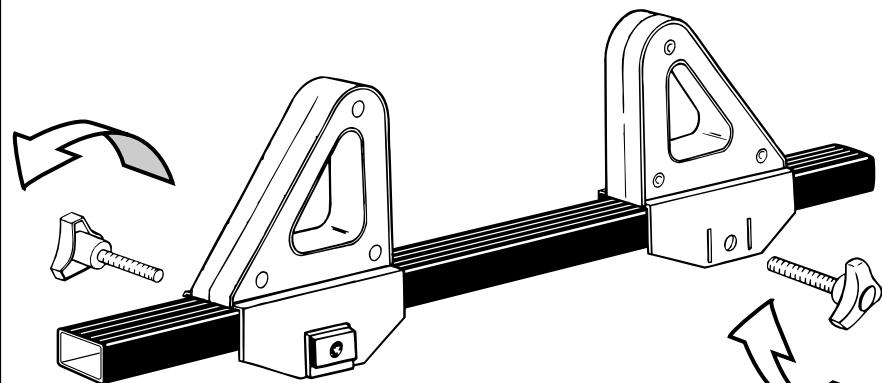

2


IMPORTANT

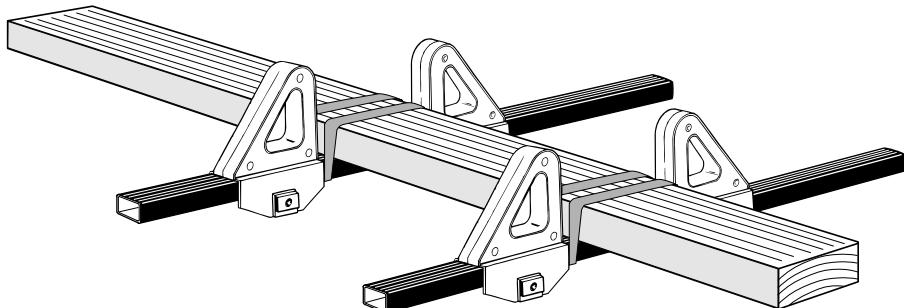

If payload is below tops of loadstops secure as shown.

French wording will go here once provided for us.

Si la charge utile ne dépasse pas les bloque-charges,
retenez-la comme dans la figure ci-dessus.

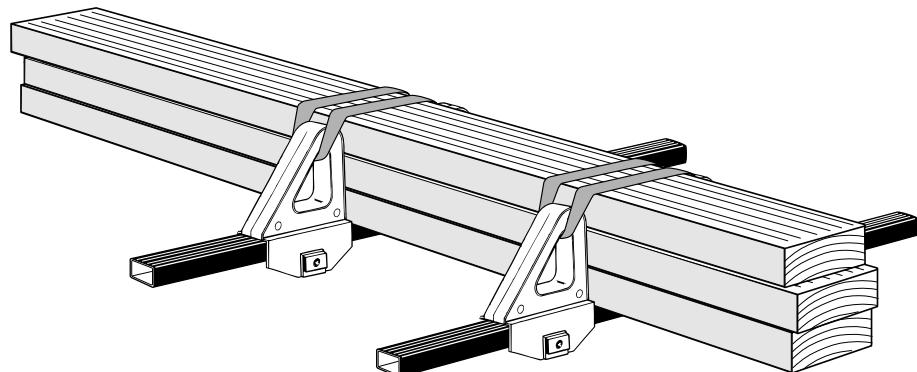


If payload is above level of loadstop secure as shown.

Si la charge utile dépasse les bloque-charges, retenez-la comme dans la figure ci-dessus.

3


Note that certain types of sunroofs cannot be opened with load carriers attached. All long loads must be tied down front and rear to the bumpers or tow hooks on the vehicle. Load carriers should be removed before going through an automatic carwash.

Veuillez noter que l'installation d'une galerie porte-bagages peut empêcher l'utilisation de certains modèles de toit ouvrant. Tout chargement long doit être attaché à l'avant et à l'arrière, soit aux pare-chocs ou soit aux crochets de remorquage du véhicule. Enlevez la galerie porte-bagages avant d'entrer dans un lave-auto automatique.

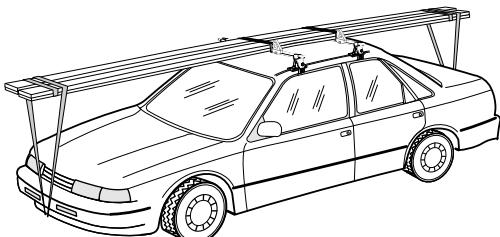

LOAD STOPS BLOQUE-CHARGES

503

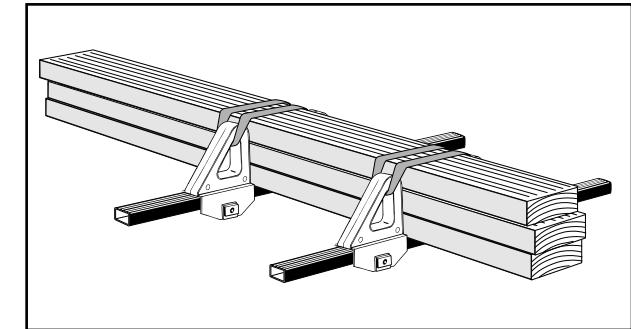

FITTING INSTRUCTIONS INSTRUCTIONS DE MONTAGE

THULE
SWEDEN

THULE
SWEDEN
CAR RACK SYSTEMS

THULE U.S.A.
42 SILVERMINE RD.
SEYMOUR CT 06483

501-5190

THULE
SWEDEN