

bosal

Инструкция по монтажу тягово-цепного устройства шарового типа 6720 А для автомобилей Kia Carens

	2001/4-...
	1200
	75
	20.53



462800,

« - »

18

т. (35363) 7-05-06

ф. (35363) 7-13-20

(495) 785-66-07


www.bosal-autoflex.ru

« - »:	(8182) 22-48-15
" - "	" 8(8442) 98-74-98
" - "	" 8(343) 379-39-89, 373-42-73
" - "	" 8(343) 26-88-308
" - "	" 8(3952) 710-194
" - "	" 8(495) 777-54-59
" - "	" 8(495)745-79-11
" - "	" 8(495) 788-95-97
" - "	" 8(495) 720-51-03
" - "	" 8(3532) 57-99-85
" - "	" 8-905-899-5012
" - "	" 8(383) 291-59-60
" - "	" 8(831) 279-53-24
" - "	" 8(3422) 98-27-20
" - "	" 8(342) 220-87-87
" - "	" 8-927-002-90-06
" - "	" 8(3462) 24-00-44
" - "	" 8(3842) 21-14-76
" - "	" 8-902-940-4151
" - "	" 8(3452) 32-22-12, 41-52-62
" - "	" 8-961-213-0278
" - "	" 8-917-347-1700
" - "	" 8(351) 269-44-75, 900-72-73
" - "	" 8(3512) 773-76-91

41.55-2005.

«B», «C» «D» с
 (1) « »
 (2, 3) « »
 (4) « »

Ø18

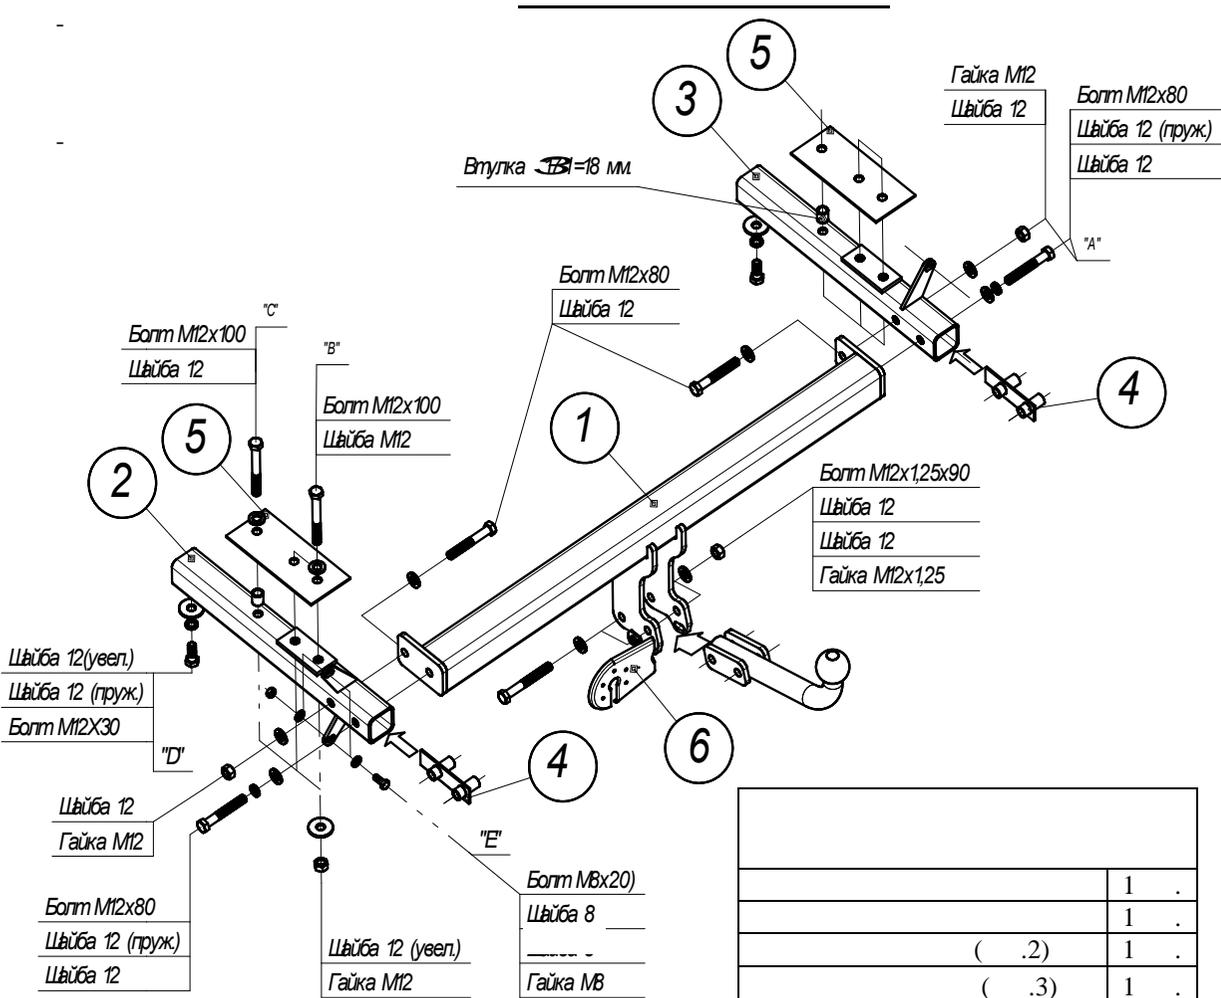

			1
			1
	(.2)		1
	(.3)		1
			1

8 20	4	Ø17	2
12 30	2	(.5)	2
12 80	4	(.4)	2
12 100	6		2
12 1,25 90	2	VH 0165	1
8 (/)	4		1
12	8		1
12 1,25	2		1
8	8	190	1
12 (.)	4		3
12	16		1
12 (.)	8		1