


КА СW 71 101 020



# ИНСТРУКЦИЯ ПО МОНТАЖУ

## комплекта электропроводки для фаркопа с 7-ми контактной розеткой (ГОСТ 9200-76)



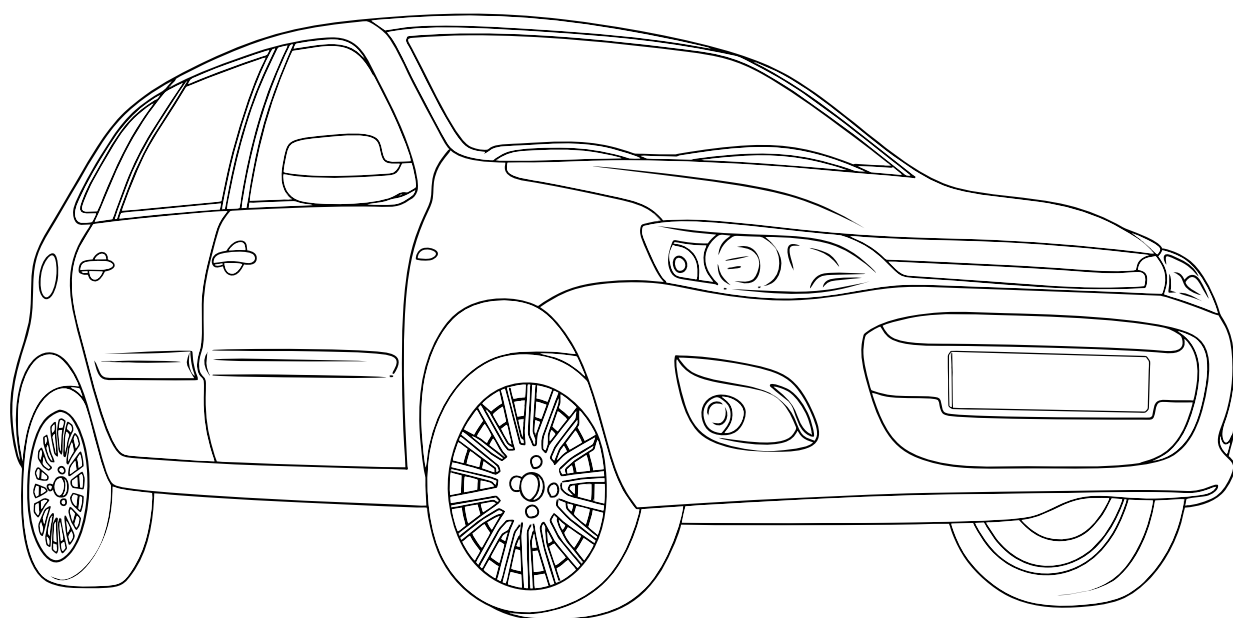


**Для Lada Kalina SD/ WAG/ НВ 2004-2018**

1.  
2.

3.

!

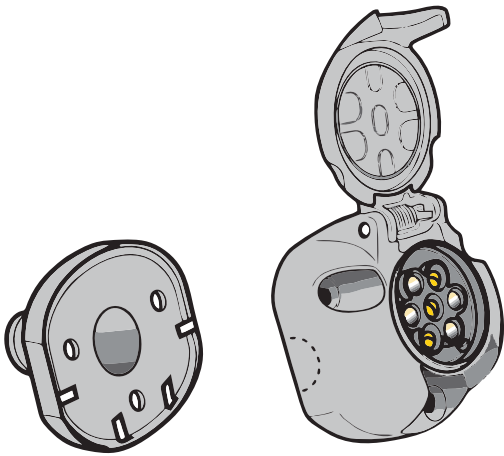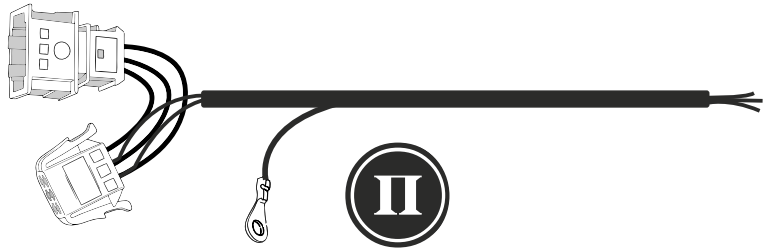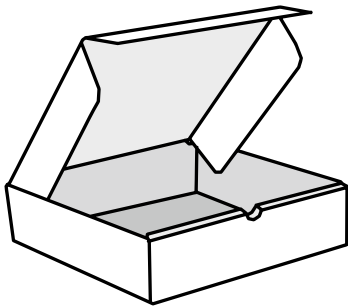

!

!




( ) .







(

!



!

),  
CODE  
CODE ( )

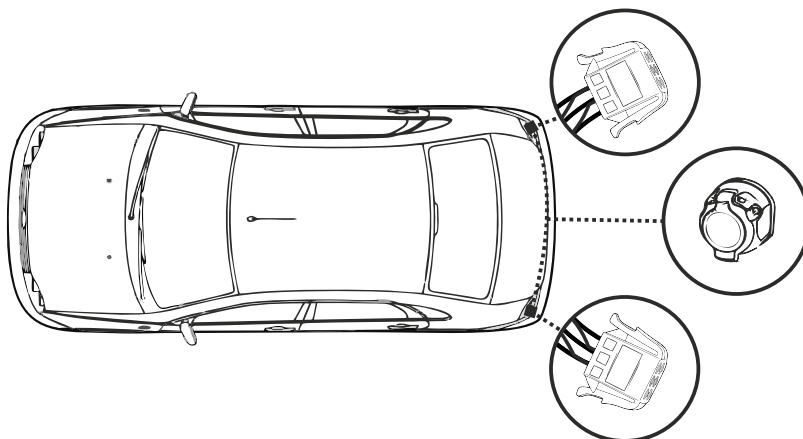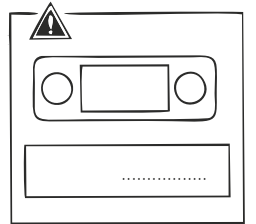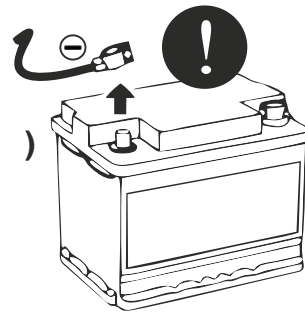

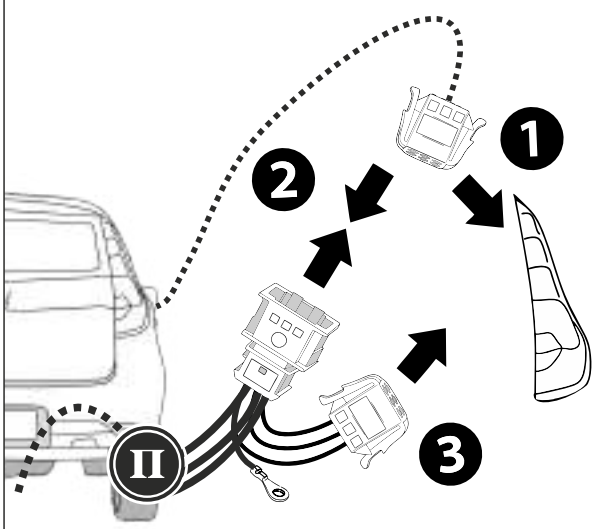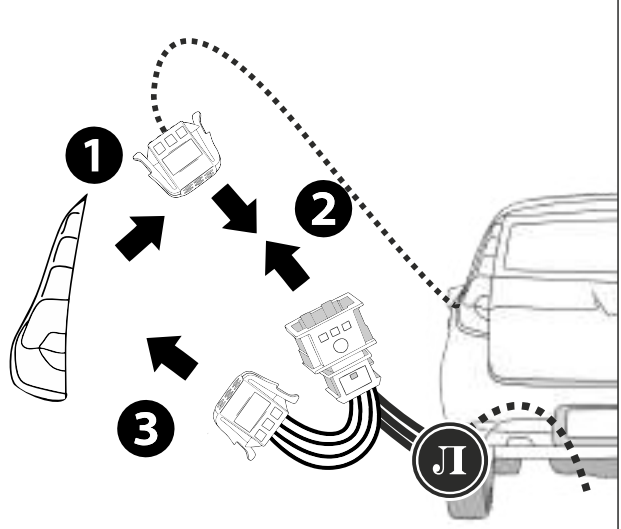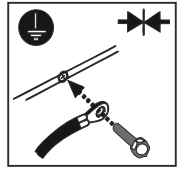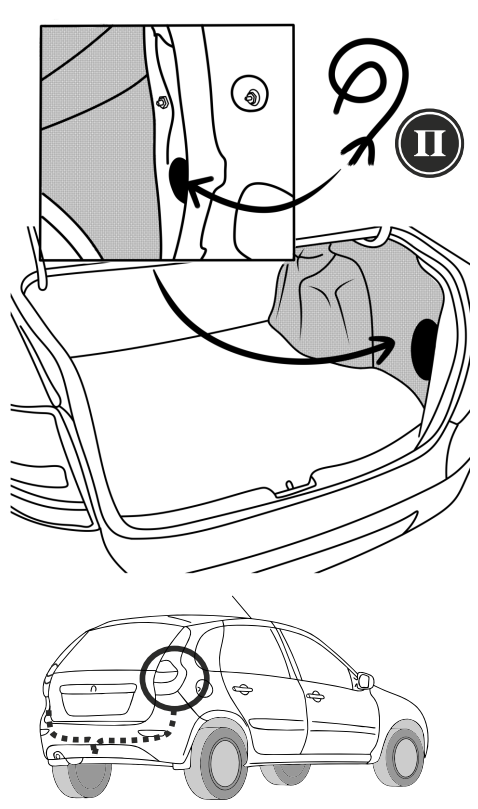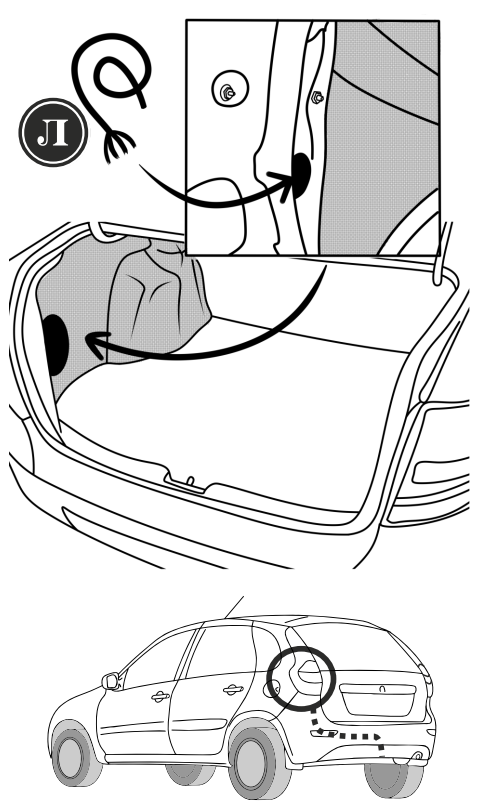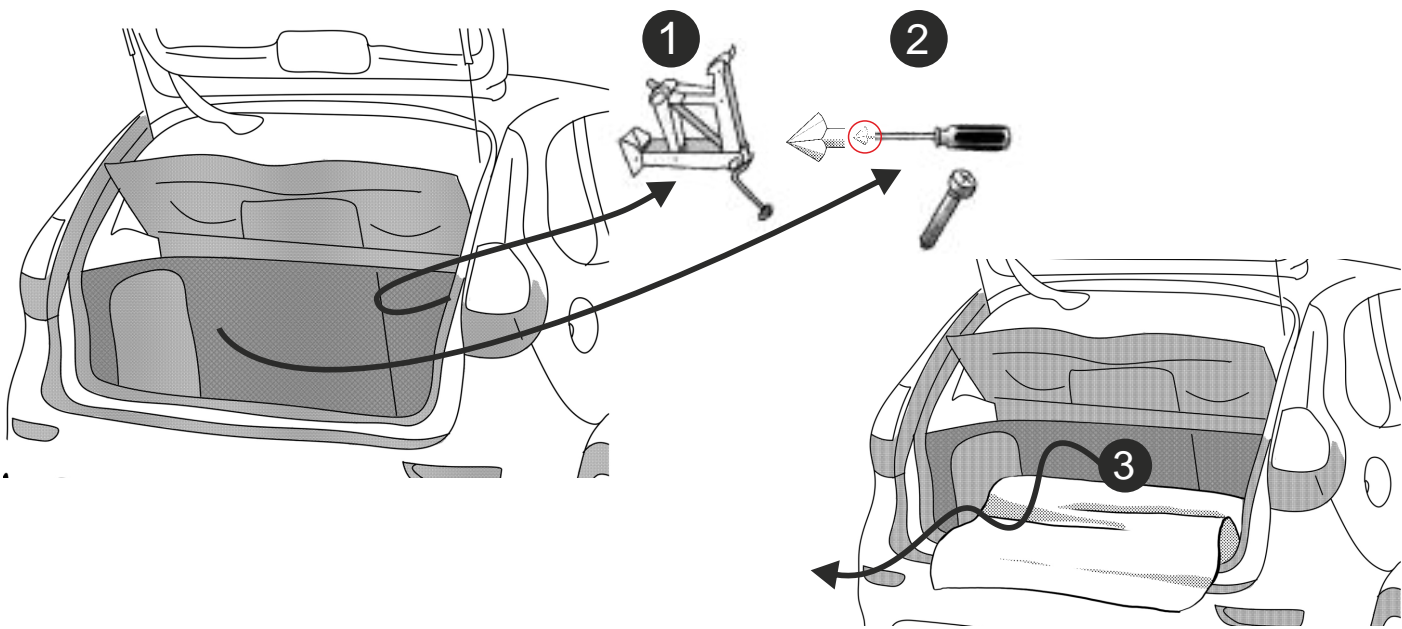

9200-76



1/L

2

3/31

4/R

5/58-R

6/54

7/58-L

21W

2x21W




21W

21W

2x21W

21W

-

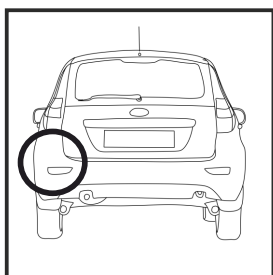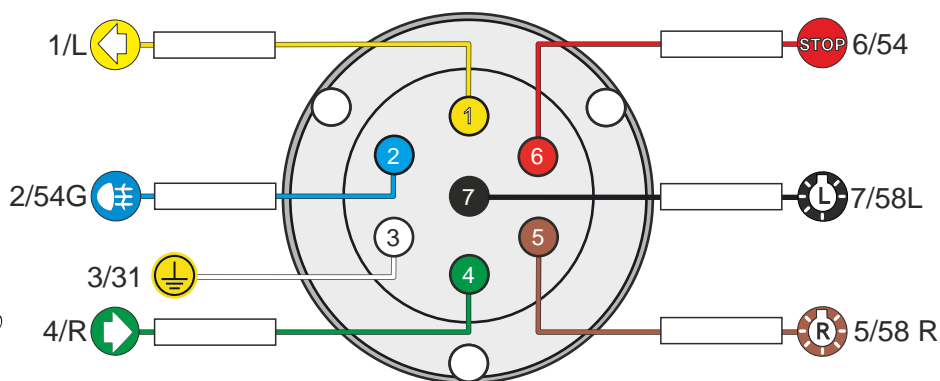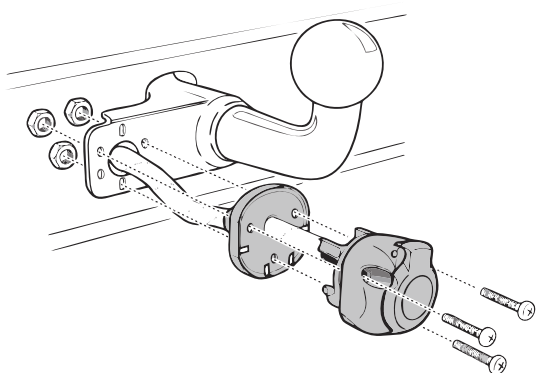

← 10 см минимально от кабеля →

